I. Installation Notice

- 1. Install water supply lines in accordance with this manual.
- 2. Floor drain should be installed in the location of the faucet.
- Install the faucet only after the completion of house interior decoration in case paint or other chemicals erode the faucet surface.
- 4. Clean pipes to get rid of mud, sand or other debris blocked in pipes.
- Check whether the threads can be matched. Otherwise, too strong force applied to the wrench will damage the faucet.
- 6. After installation, check all the joints to make sure they are firmly connected. Then keep water flow. Turn on and off repeatedly to ensure there is no leakage around the joints. At this stage, the product is ready for normal use.
- 7. Keep the manual to the user.

II. Operation Notice

- 1. The product is used between water pressure 0.05~1.0MPa, water temperature 4~90°C.
- 2. Do not hang heavy things on the faucet.
- 3. Make sure the faucet is off when no water comes out of it (especially when nobody resides in the house or during the period of decoration or the absence of water).
- 4. Always clean the surface of faucet to keep it bright. Attention: Please do not use inappropriate tools such as sharp brushes, rough sponges, scouring pads or corrosive detergent to clean the faucet, and we do not recommend that you use the detergent sold in the market, because its formula is changing frequently. Please clean the faucet by wet cloth and soapy water after each time of usage. Then rinse the soap out with clean water and dry with a soft cotton cloth.
- 5. When the room temperature drops to below 0°C, take necessary measures (such measures as keeping faucet warm and closing windows) to prevent the faucet from being frozen or even broken (especially when windows kept open for air ventilation while nobody resides in).
- 6. Do not disassemble the product unless you are an expert.

III. Installing Steps

- 1. Screw the mounting nuts into the faucet body and tighten them.
- Put the escutcheon on the faucet body and place them through the sink deck hole. Pad the rubber washer and locking gasket in order. Then fasten them with locking nuts.
- Connect the check valve adaptor and triangle valve firmly. Then install the steel braided hoses.(Make sure that the red braided hose is connected with hot water inlet and blue braided hose is connected with cold water inlet.)
- 4. Turn on water for inspection.

IV. Maintenance

- 1. This product is a double 360° rotating faucet, with the maxing gyration radius 420mm.
- 2. The cartridge switch can rotate horizontally 180°, not vertically. As detailed in diagram, when turn the cartridge switch to the most right end, the faucet is shut off. When turn it clockwise, cold water flows incrementally. At 90°, cold water output reached its maximum. Over 90°, the cold water output lessens to null and hot water flows incrementally. At 180°, hot water output reached its maximum while cold water is out.
- 3. Please turn off the cartridge switch after each time of usage. The spout switch is used for temporary pauses.

