


I .Attention to installation

- 1.Install water pipe as per this manual.
- 2.Floor drain should be installed in the location of the faucet.
- 3.The faucet is to be installed after decoration (as smell of paint will corrode the surface of the faucet).
- 4.Make sure that there is no block in the pipe before installation. Get rid of mud, sand or other foreign matter in the pipe.
- 5.The thread part shall be wound by raw material tape before it is screwed.A piece of cloth shall be used as a pad between the wrench mouth and the faucet to avoid the damage of faucet, (check whether the threads can be matched. Other wise, too strong force applied to the wrench will damage the faucet.)
- 6.Check that the connecting parts are firmed after installing. Then connect water source and turn on and off repeatedly to see whether there is any leakage around the connecting part. It can be used after the confirmation.
- 7.Leave the manual to the customer.

II .Attention to operation

- 1.The product shall be used under the condition of water pressure 0.05~1.0MPa and water temperature 0~90°C.
- 2.Don't hang heavy things on the faucet.
- 3.Make sure that the faucet is off when no water comes out of it (especially when nobody resides in the house or during the period of decoration or the absence of water).
- 4.Always clean the surface of faucet in neutral wash solution. Then dry it with a piece of soft cotton cloth to keep it bright.
- 5.When room temperature drops to below 0°C, take necessary measures to prevent it being frozen and even broken especially during the absence of residence. (such as keeping faucet warm and closing windows.)
- 6.You should open the cold and hot water in turn and adjust the temperature before washing or showering. Don't touch the faucet of hot part avoid scald.
- 7.Don't disassemble the product unless you are an expert to avoid damage.

■ Installation diagram

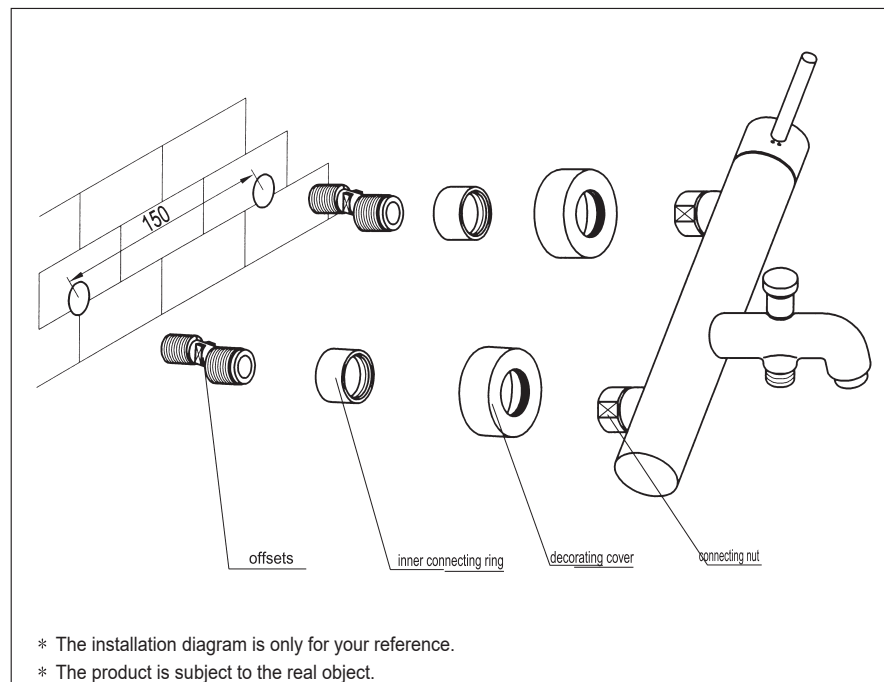

■ Installing steps

- 1.Install in a proper height the cold and the hot water pipes, between which is a distance of 150mm with hot left and cold right.
- 2.Wind raw material tape around the two offsets. Screw them down on the pipe joints with a wrench. The set a distance of 150mm by adjusting balance and level.
- 3.Screw the inner connecting rings on the offsets with the thread ends outwards. Put the decorating covers around the inner joints with the beels toward insids so that they can cling to the wall together with inner connecting rings.
- 4.Connect the connecting nuts with offsets and screw down.
- 5.Turn back two inner connecting rings and let them cling to the connecting nuts. Then push back the decorating covers to the wall.
- 6.Connect water source to see whether installation is OK.